



**NECTAR HEX**

[WWW.NECTARMEDICALVAPES.COM](http://WWW.NECTARMEDICALVAPES.COM)

**At Nectar, we develop products which allow customers to utilise the benefits of cannabinoids whilst eliminating the intake of toxins and carcinogens.**

We strive for 100% customer satisfaction.  
If you have any queries about our products or services then please get in touch (scan/click the relevant QR Code below, or see the last page for full contact details):

We look forward to hearing from you.

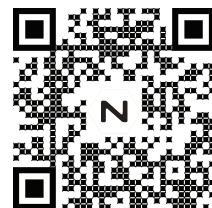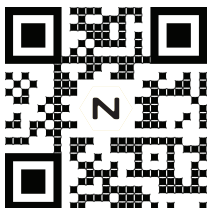

# Product Contents



1x Nectar Hex Vaporizer

1x USB-C Charging Cable

2x Isopropyl Alcohol Pads

1x Cleaning Kit


1x Dosing Capsule (Herbs)

1x Dosing Capsule (Extracts)

1x QR Code Card

3x Gauzes

# Diagram

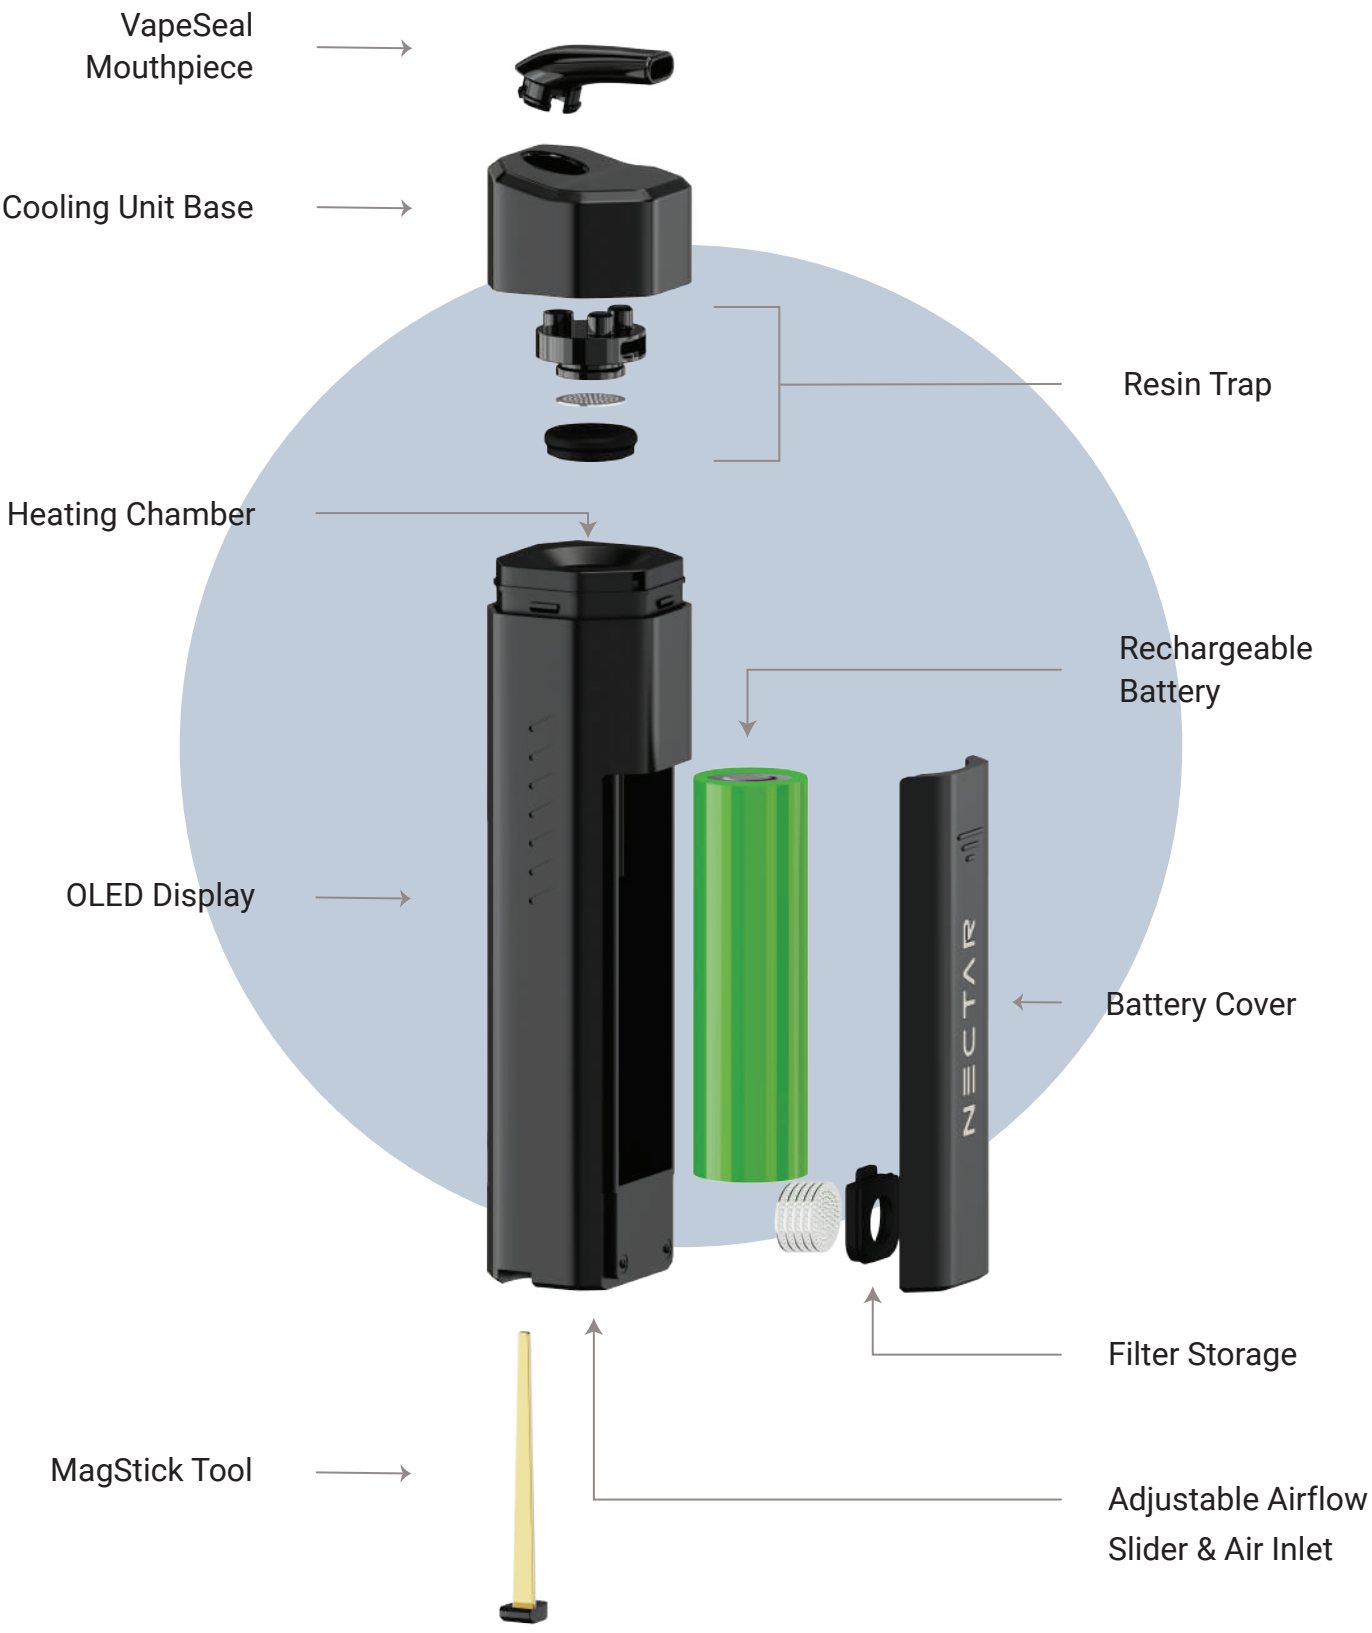

# Specifications



## Dimensions

13.5cm x 3.1cm x 3cm



## Device Weight

232g



## Colour

Matte Black



## Battery Life

60+ mins usage  
(3000mAh - 20A)\*



## Compatible Ingredients

Dry Herbs + Extracts  
(Rosin/Wax/Hash)



## Materials

24ct Gold-plated SS Chamber/  
Aluminium Body /  
Zirconia Cooling System



## Temperature Range

100°C - 240°C /  
212°F - 464°F



## Temperature Precision


1°C Increments

*\*The device requires a minimum continuous discharge of 20A (required if replacing battery).*

# Operating Guide: Battery & Charging

It is recommended to charge your Nectar Hex for 1 hour before its first use. When charging, the OLED screen will light on and show the battery charging gauge which will blink whilst charging. The OLED screen will indicate a full gauge and will stop blinking when the battery is fully charged.

**Note: Avoid overcharging to protect and extend the battery life.**

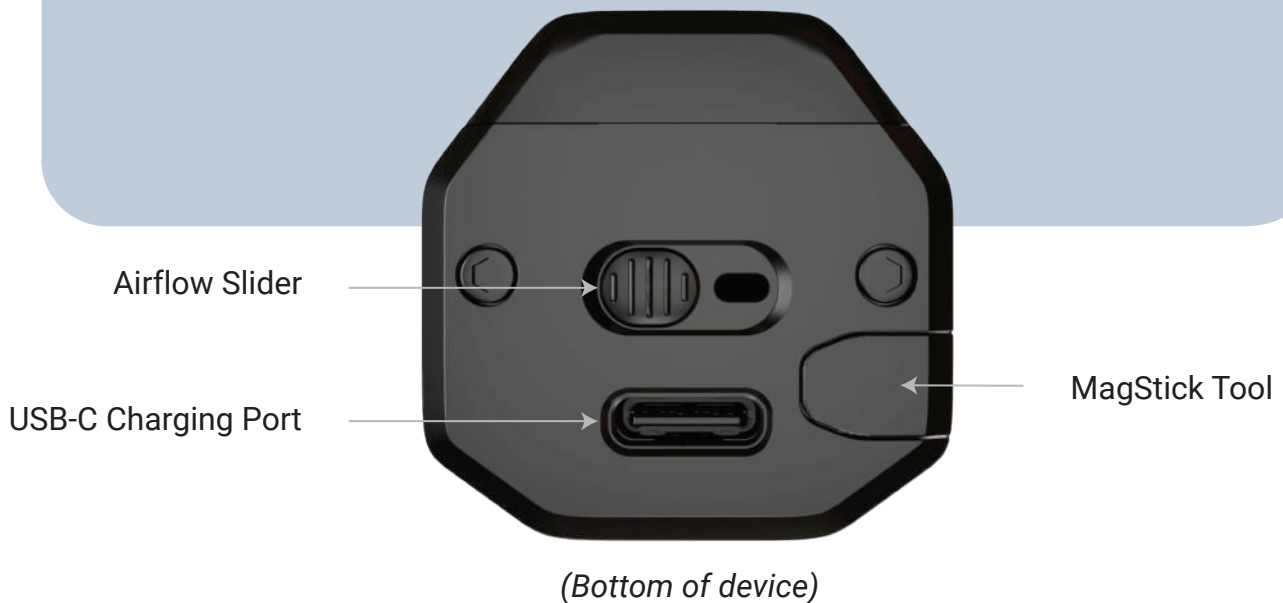

*Approx Charging Time: 60mins*

*Note: Tighten the airflow for stronger effect.*

After using the device allow it to cool down before storage. Store it in a dry and cool place to protect it against the effects of weather and avoid damage to the battery. Store out of reach of children.

# Operating Guide: Timer

## The Timer

The device features a session timer which automatically turns the device off after 3, 6 or 9 minutes to ensure the battery is conserved and the device does not overheat. Once the timer is reached and the device turns off, another vibration will alert you that the device has turned off.




# Operating Guide: Toggles & Flip Screen


To toggle the session timer between the 3, 6 and 9 minutes options, hold the **'power'** button and **'up'** button together for 3 seconds. Then press **'up'** or **'down'** to toggle the different options.



To toggle the temperature setting between Celsius and Fahrenheit, hold the **'power'** button and **'down'** button at the same time for 2 seconds

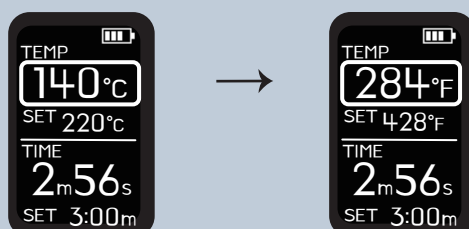

To flip the screen, hold the power button for 5 seconds. The screen flip is designed to enable users to observe the screen whilst using the device, in other words for anyone who wants to time their tokes and regulate their intake.

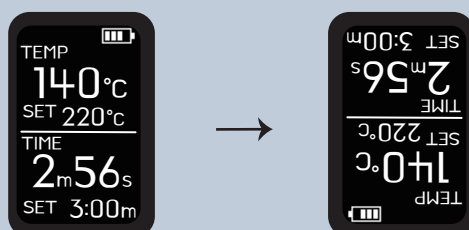



# Sterilising in 3 steps

**01**

## **Prepare for sterilising**

Before sterilising your device, ensure it has been sufficiently charged (see page 4). If you're sterilising after cleaning the device then ensure your parts have been wiped dry with a clean cloth before proceeding to the next step.

**02**

## **Setting your temperature**

Turn the device on by pressing the power button 5 times. Then set your vaporizer to the maximum temperature (240°C) by holding the temperature 'up' button until 240°C is reached.

**03**

## **Sterilising**

Detach the cooling unit and allow the device to heat for 3 minutes with an empty chamber in order to sterilise it. The device has a built in 3-minute timer and hence it will turn itself off once the sterilisation process is complete.

Repeat this step once more with the cooling unit attached. In summary, you will do this once without the cooling unit detached and once with the cooling unit attached.

# Operating Guide: Vaping Dry Herbs

01



## Sterilising

Once your Nectar Hex is fully charged and sterilised (see page 7), you can then detach the cooling unit and prepare to load it with your chosen material.

## Packing your chamber/bowl

Grind your herbs and pour them into the chamber (at least half full for best results). Then compact the herbs softly with the base of the MagStick.

**Note: Compacting too tightly will restrict airflow.**



02

03



## Turning your device on

Attach the cooling unit back onto the device then press the power button 5 times consecutively to turn on the device. Once on, the device will begin to heat up automatically.

# Operating Guide: Vaping Dry Herbs

04



## Setting the temperature

Press the 'up' and 'down' buttons to increase and decrease your desired temperature. Once the desired temperature has been reached the device will vibrate.

## Vaping your herbs

Once the desired temperature has been reached, wait another 20s in order to give your herbs time to heat evenly. When ready, take long, slow and smooth tokes - lasting around 5-10s per toke (without pressing any buttons).

05



06



## The perfect temp for herbs

You can vape the same batch of herbs over multiple sessions until they look dark brown/black.

Note: There is no perfect vaping temp for herbs! Start at 180°C and increasing the temp by 10°C each session until you've found your preference.

# Operating Guide: Vaping Extracts\*

01

## Clearing the chamber

If recently used, allow your device to cool down then clean it out using the MagStick and/or a brush to ensure the chamber is free of any loose leaf and/or resin. Place the provided extract/concentrate/wax pad into the chamber.

02

## Adding extracts into the capsule

Place a small amount of extract onto the pad, roughly the size of a half a pea & gradually increase to the size of a pea to find your preferred amount. See next page for more info.

**Note:** *When using extract dosing capsules, remove the resin trap as this maximises the utilisation of the extract.*

03

## Vaping temperature for extracts

Extracts tend to have a higher boiling point than dry herbs so set the temperature of your device to 230°C-240°C. Once your device vibrates, wait an additional 20s and then take long, slow and smooth tokes (each toke should last between 5-10s depending on how strong you desire the hit to be).

*\*NOTE: To vape extracts you should use an extract dosing capsule to avoid clogging your device. Please see page 11 for more instructions when using extract dosing capsules.*

# Operating Guide: Loading the Dosing Capsules

## 01

Dry Herbs | Extracts



### Capsules: Herbs vs Extracts

The Nectar Hex utilises two dosing capsules which should be filled as below for best results:

- Dosing Capsule for Herbs = 3/4 Full
- Dosing Capsule for Extracts = 1/2 Pea Size


## Loading a herb dosing capsule

Fill the dosing capsule to the top. Then compact the herbs by pressing lightly with your finger or the bottom of the MagStick. **Note: Avoid packing too tightly as this may restrict the airflow.**

## 02



## 03

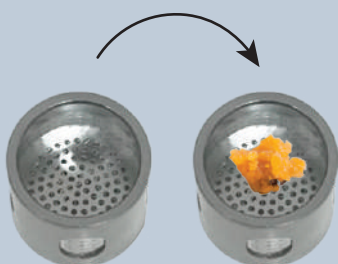

### Applying extract to dosing capsule

Apply a small amount of extract to the centre of the extract pad; we recommend an amount half the size of a pea.

# Operating Guide: Vaping with Capsules

04



## Loading a dosing capsule

Load the capsule into the chamber the right way up by ensuring the top of the capsule is pointing upwards. **Note: When using extract dosing capsules, remove the resin trap; this maximises the utilisation of the extract.**

## Vaping with extracts

When using extract dosing capsules, ensure to remove the resin trap; this maximises the utilisation of the extract.

05



06



## Temperature for extracts

Reattach your cooling unit and set your desired temperature to 230°C-240°C using the 'up' and 'down' buttons. Once the temperature is reached, wait an additional 20s and then take long, slow and smooth tokes lasting between 5-10s.

# Operating Guide: Emptying your chamber

01



## Clearing out the dosing capsules

Once the device cools down, detach the cooling unit and remove the dosing capsule. If the herbs inside the capsule have discoloured, use the MagStick to scoop them out and reload it with fresh herbs. **Note:** *You can reuse each dosing capsule until tarnished.*

## Clearing out the chamber

Once the device cools down, detach the cooling unit and check whether the herbs inside the chamber have discoloured. If so, use the MagStick to empty them out. **Note:** *You can recycle the used herbs in tea and edibles.*



02

03



## Brushing off excess residue

After clearing the chamber, use the cleaning brush to wipe away any remaining residue. Doing so will help keep your device clean. **Note:** *Perform a light clean every 5 sessions and a deep clean every 20 sessions for optimal performance.*

# Cleaning: Light Clean

Perform a light clean once every 5 sessions (Steps 1 to 3).

## 01



### Prepare for cleaning

Before cleaning your device, it is important to allow your device to completely cool down in order to avoid injuries. Once cooled, detach your cooling unit and prepare your device for cleaning by brushing away any loose leaf.

### Cleaning the mouthpiece

Once detached, scrub the inside of the mouthpiece with a pipe cleaner soaked in Isopropyl Alcohol (ISO). Clean the outside of the mouthpiece with an alcohol pad before wiping away excess dirt with a clean and dry pipe cleaner and/or cloth.

## 02



## 03



### Cleaning the heating chamber

Soak a cotton swab or cleaning brush with ISO. Insert into the chamber and scrub the sides and bottom with a circular motion and repeating the process until you are satisfied. Then dry using a clean and dry cloth or cotton swab.



# Cleaning: Deep Clean

Perform a deep clean once every 20 sessions (Steps 1 to 6).

## 04



### Dismantle the cooling unit

1. Rotate and pull the mouthpiece off the cooling unit.
2. Detach the resin trap by pulling off.
3. Dismantle the resin trap into its 3 separate pieces.


### Method 1: Cleaning the filters

Use a brush soaked in ISO to disinfect and clean any excess residue from the Resin Trap, its gauze and the rubber holder. Now rinse off each part with lukewarm water and then dry using a clean cloth. Put your device back together, sterilise and use.

## 05



## 06

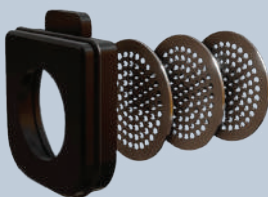

### Method 2: Replacing the filters

The resin trap collects unwanted residue so you can conveniently replace the entire section or just parts of it. When replacing parts, simply disassemble your device and reassemble it with the new parts.

**Note: Isopropyl alcohol deforms rubber. Do NOT soak rubber parts for more than 30s.**

# Nectar Club Subscription

Designed to pay for itself.

**“Receive a FREE upgrade/vaporizer once every 2 years”**



**Starter**  
£4.99/mo



**Master**  
£12.99/mo




**Guru**  
£18.99/mo

Scan the QR Code to see our monthly plans. **Sign up now to receive:**

- Receive a refurbished version of your device every year.
- Lifetime Insurance (Covers Accidental Breakage).
- Receive products worth up to £613.19 every 2 years.
- Receive a FREE upgrade/vaporizer once every 2 years.
- Receive a lifetime discount (up to 15% off sitewide).

+ MORE!

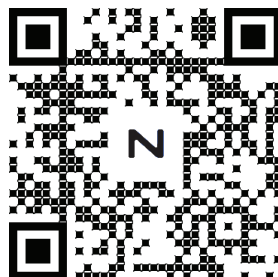


[nectarmedicalvapes.com/nectar-club-pricing/](https://nectarmedicalvapes.com/nectar-club-pricing/)

# Nectar Warranty Registration

Register your device and activate your 2 year warranty.

## 2 YEAR WARRANTY

Please follow the simple three steps below to register you product and activate your 2 year warranty.

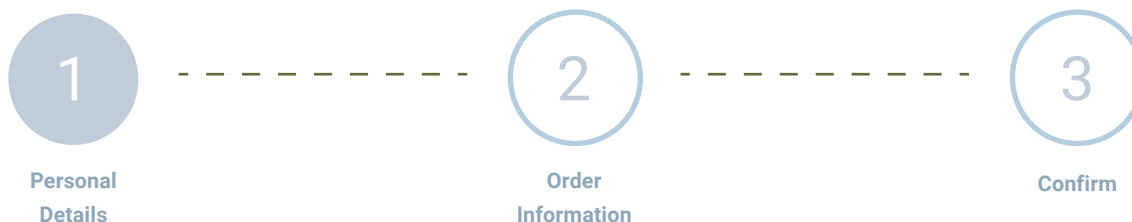


Scan or click the QR Code at the bottom of the page to register your device and **activate your 2 year warranty:**



[nectarmedicalvapes.com/warranty/](https://nectarmedicalvapes.com/warranty/)

# Purchasing Replacement Parts

Scan the QR Codes to purchase the corresponding accessories.

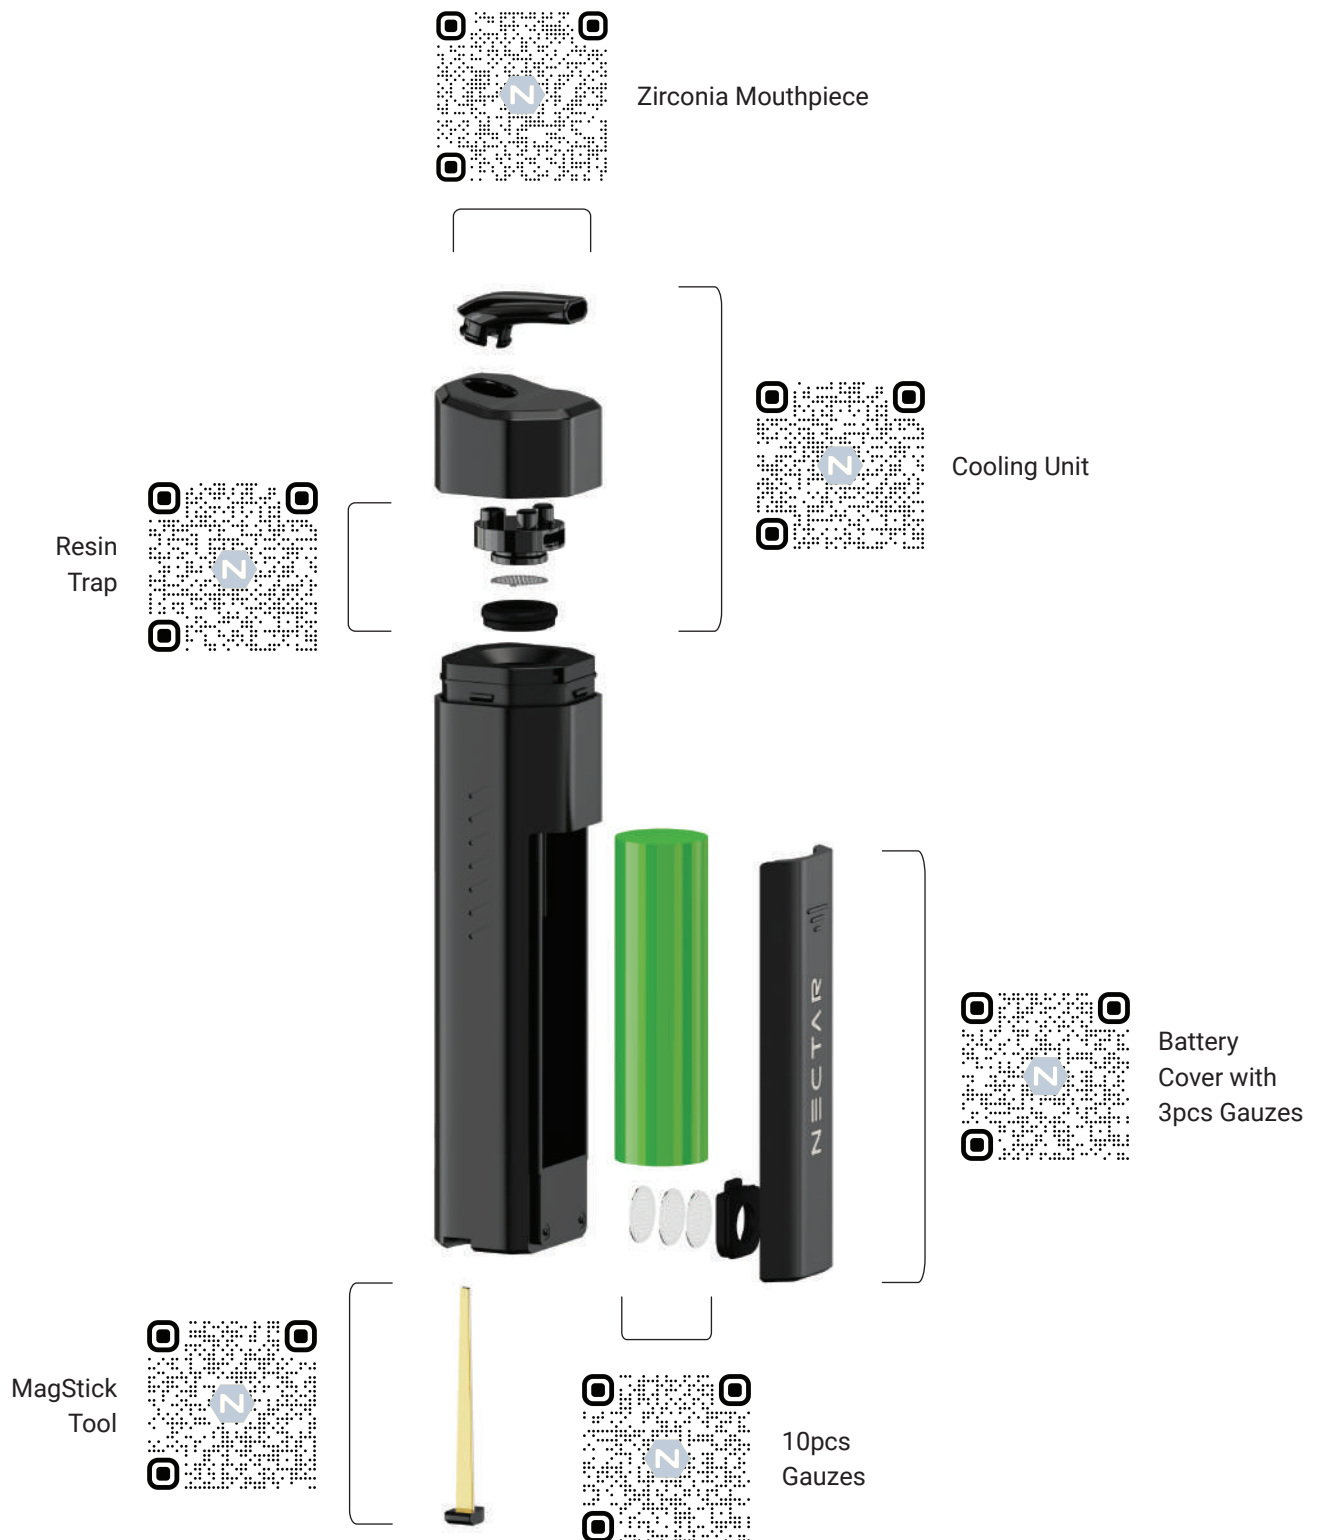



# YouTube Support Videos

Scan the QR Codes below to watch the relevant videos and/or subscribe to our channel.

## Watch our support videos




### How to Use the Hex

Length: 12mins





### Hex Features Video

Length: 2.5mins

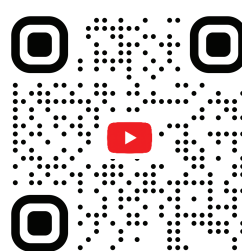

---

## Subscribe to our channel



# Warnings

## Liquids & Extracts

Do not submerge the whole device or its chamber into water, isopropyl alcohol (ISO), or any other substance. Do not use the device with viscous liquids/oils as this may block the airflow holes. Extracts can be used with the device only whilst using the wax pad as advised.

## Error Codes

The device may indicate an issue with the battery by present the error message **"out short"** or **"low voltage"**. Replacing the battery with an original battery should fix the issue. If not, then please contact our customer service via WhatsApp.

## Charging

Do NOT charge your device with a charger consisting of more input than **5V/2A**. Do not leave your device with no charge for periods over 2 months as this will cause a reduction in future capacity and possibly battery failure.

## Law & Age

This device can be used for various herbs and extracts, some of which may be considered restricted or illegal in some countries. Please check your local jurisdictions for legality and minimum age restrictions.

# Disclaimer

Thank you for purchasing our Nectar Hex vaporizer. We hope you enjoy using it as much as we did making it!

- To ensure optimal performance and safety when using it, please read this instructions manual carefully and understand them fully before using your device. We recommend you keep these instructions in a safe place for future reference.
- This device is not intended to diagnose cure, treat or prevent diseases or other conditions. If you have any health problems, consult your doctor before using the device.
- This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first consulting a doctor. Never use before driving or operating machinery.
- This device is not intended to administer illegal substances of any kind. Any use of this device could subject the user to fines, penalties, and/or imprisonment under the law of your jurisdiction. Please check your local laws and jurisdictions for the legality and minimum age limit of using the device with your chosen constituents.



Certificate of Conformity (EU). The CE marking represents a manufacturer's declaration that products comply with the EU's New Approach Directives.



The Federal Communications Commission. Equipment authorisation issued by an FCC recognised Telecommunication Certification Body.



Product level compliance based on the European Union's Directive 2002/95/EC, the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment.



The UKCA marking is the product marking used for products being placed on the market in Great Britain (England, Scotland and Wales).



# THANK YOU

...For being part of the Nectar family!

To activate your 2 year warranty please register your device at:

<https://nectarmedicalvapes.com/warranty/>

[WWW.NECTARMEDICALVAPES.COM](http://WWW.NECTARMEDICALVAPES.COM)